

Motorcycle Digital Tyre Warmer Instructions www.flyingmile.co.nz

Operation

- 1. Connect tyre warmers to controller matching red to red (front tyre), black to black (back tyre)
- 2. Plug connector into power and switch on
- Controller will display current temperature and heat until the current set point

 Note: this will indicate the surface temp of the tyre. Leave for 45
 minutes for the tyre and the wheel to heat up before using.

Turning Off

- 1. Simply unplug from the power and disconnect the connectors
- 2. Wait 1 or 2 mins before removing the warmers from the tyre to allow the elements to cool down
- 3. Wait at least 5 to 10 minutes until the warmers have cooled before rolling up Note: Always roll, never fold tyre warmers else elements may be damaged!

Setting Temperature

- 1. Press either F (front) or R (rear) and St will flash with the current temp setting
- 2. Press and hold either + or to set the temperature
- 3. Press F or R twice or wait 15 seconds and it will be set

Calibration

- 1. If you need to calibrate, test with an infrared thermometer
- 2. Press either F (front) or R (rear) twice and CA will flash
- 3. Press and hold either + or to set the calibration adjustment
- 4. Press F or R again or wait 15 seconds and it will be set

Code/Display	Function	Range	Default
<u>5 8</u>	Temperature Setting Front/Rear	0°C to 99°C	80°C
88	Temperature Sensor Calibration Front/Rear	-10°C to 10°C	0°C
KK	Indicates short circuit of sensor and will not heat		
LL	Indicates open circuit of sensor and will not heat (lead plug has likely not been plugged in correctly)		
53	Indicates temperature exceeding 3°C of the	set point	

Specifications

Working Environment	-10°C to 50°C under 90% humidity	
Controller Temp Range	0°C to 99°C	
Temp Differential//Hysteresis	0.3°C	
Front tyre warmer rating	415 watts to 440 watts	
Rear tyre warmer rating	645 watts to 700 watts	
Total maximum load	1060 watts to 1140 watts	
Heating element	Silicone gel (not copper or stainless-steel wire)	